

Thank you for choosing our smart watch. You can read this manual to get a comprehensive

developed many functions for human sports and health. This device is not a medical device, and the measurement data and results are for reference only, not as a basis for diagnosis and

treatment. The Company reserves the right to modify the contents of this manual without prio

This product supports IP68, rain, hand washing and other wear without worry, after soaking in water there will be water in the horn hole please shake the water out, the sound can return to

Note:During hot shower or sauna, should not be worn to prevent vapors . If the watch is

damaged by water because of not following the instructions, the company does not make a

understanding of how to use the device. The device connects to a mobile phone through Bluetooth for adaptive use, provides a variety of practical functions and services, and has

Please read this manual carefully before using the product and keep

Package contents: watch (including strap) DM55, charger DM55, DM55 product manua

DM55 Product description

App installation

You can use the "scan" function in wechat or browser to scan the "QR code" of the watch and download and install FitCloudPro. You can also download and install FitCloudPro by searching for FitCloudPro in App store, Google Play Store, etc.





Watch Connection QR code connection

After you open the APP, if the dialog box for obtaining permission pops up on the mobile phone, please click Allow to obtain. In the "Device" interface of the APP, click "Add Peripheral now" and select the "Scan" function in the upper right corner of the "Binding Device" interface. The mobile phone can scan the QR code in the "Settings" of the watch. During the pairing process, the connection confirmation button will pop up on the watch and mobile phone . Please click "Allow pairing" to complete the pairing.

Manual connection

after open mobile phone bluetooth, open FitCloudPro and click on the "Device" interface and click on the "Add Peripheral now" and search the nearby bluetooth in the binding device interface, you just need to find the name of the watch (models), click to enter matching, during the matching process, watch and the mobile phone and connection confirmation button will pop up on the watch and mobile phone . Please click "Allow pairing" to complete the pairing. When you finish the above operations, slide down on the watch face, you will see the color change of the "Bluetooth" icon, and confirm the Bluetooth status through different icons.

Swipe up: Enter the message



notice

free warranty



normal; and dry via soft cloth before the operation of the watch.






APP BT Connect APP BT Disconnect

BT Disconnection

Product introdution

In EitCloudPro Click "Unbind" on the "Device" interface of the APP to unbind the watch. After the APP is unbound, manually enter the Bluetooth connection interface of the mobile phone again, find the name of the paired watch and click "Unpair" (click "Ignore Device" in IOS) to finish the complete unbind.

Key Manual

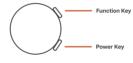

Function key:

- 1. Press one time to enter the main menu on watch face
- 2. Quickly press two times to switch the main menu to different styles on main menu. 3. Press one time to return to the watch face on other function interfaces.
- 4.Long press the button for 4 seconds to enter the Siri voice assistant.

- 1 Long press the button for 4 seconds to nower on or power off.
- 2, short press to return the watch face and short press again to extinguish the screen.

notification interfaces, swipe up or down to view each message, sw left to delete a message.



Swipe right: Enter the main menu and you can swipe up or down to select the corresponding functions

Swipe down: Enter the control center to view Bluetooth status battery power and some common functions

Charging Manual

1. The battery icon of the watch will become red when the battery capacity is less than 20%, the os will automatically turn off the motor vibration function. If the power saving mode is enabled, the watch will turn off the bt. reduce the brightness to the lowest, turn off the raise to wake, turn off the automatic detection of heart rate, vibration motor and other functions

2.The watch charging need to use 5V power adapter and it is required to be 5V 500MA or 5V A. When the magnetic charging cable is aligned with the charging part of the watch, the watch will automatically attract the charging plug. When charging, the watch will be prompted by the charging interface, and the charging icon will be stationary after being fully charged. 3.because the charging plug is magnetic, it's easy to absorb other conductive metal objects, please timely close the power adapter after the completion of charging, pay attention to the magnetic plug and do not touch other metal objects or be adsorbed on the metal objects, so as to avoid short circuit.

Q&A

- 1. Sleep data is not accurate enough
- A. Sleep monitoring simulates people's natural sleep and wake up time, so it needs to be worn normally
- B. If you wear it too late or when you fall asleep, errors may occur.
- C. sleep data is not monitored during the daytime, the default sleep monitoring period is 9-30 p.m. to 12-00 a.m. the next day.
- 2. BT is not connected or cannot be connected
- A. Restart the watch and reconnect.
- B. Please try to restart the mobile phone BT and connect again.
- C. Do not connect the mobile phone to other BT devices at the same time. Try to connect the mobile phone again after untying other devices.
- 3. Inaccurate measurement of heart rate/blood oxygen
- A. Generally, when measuring, it is caused by poor contact between watch sensor and wrist. B. Please pay attention to the full contact between the sensor and the wrist during
- C. For people with darker skin and hairy arms, please go to the App to open[Devices-Enhanced] measurement).



